


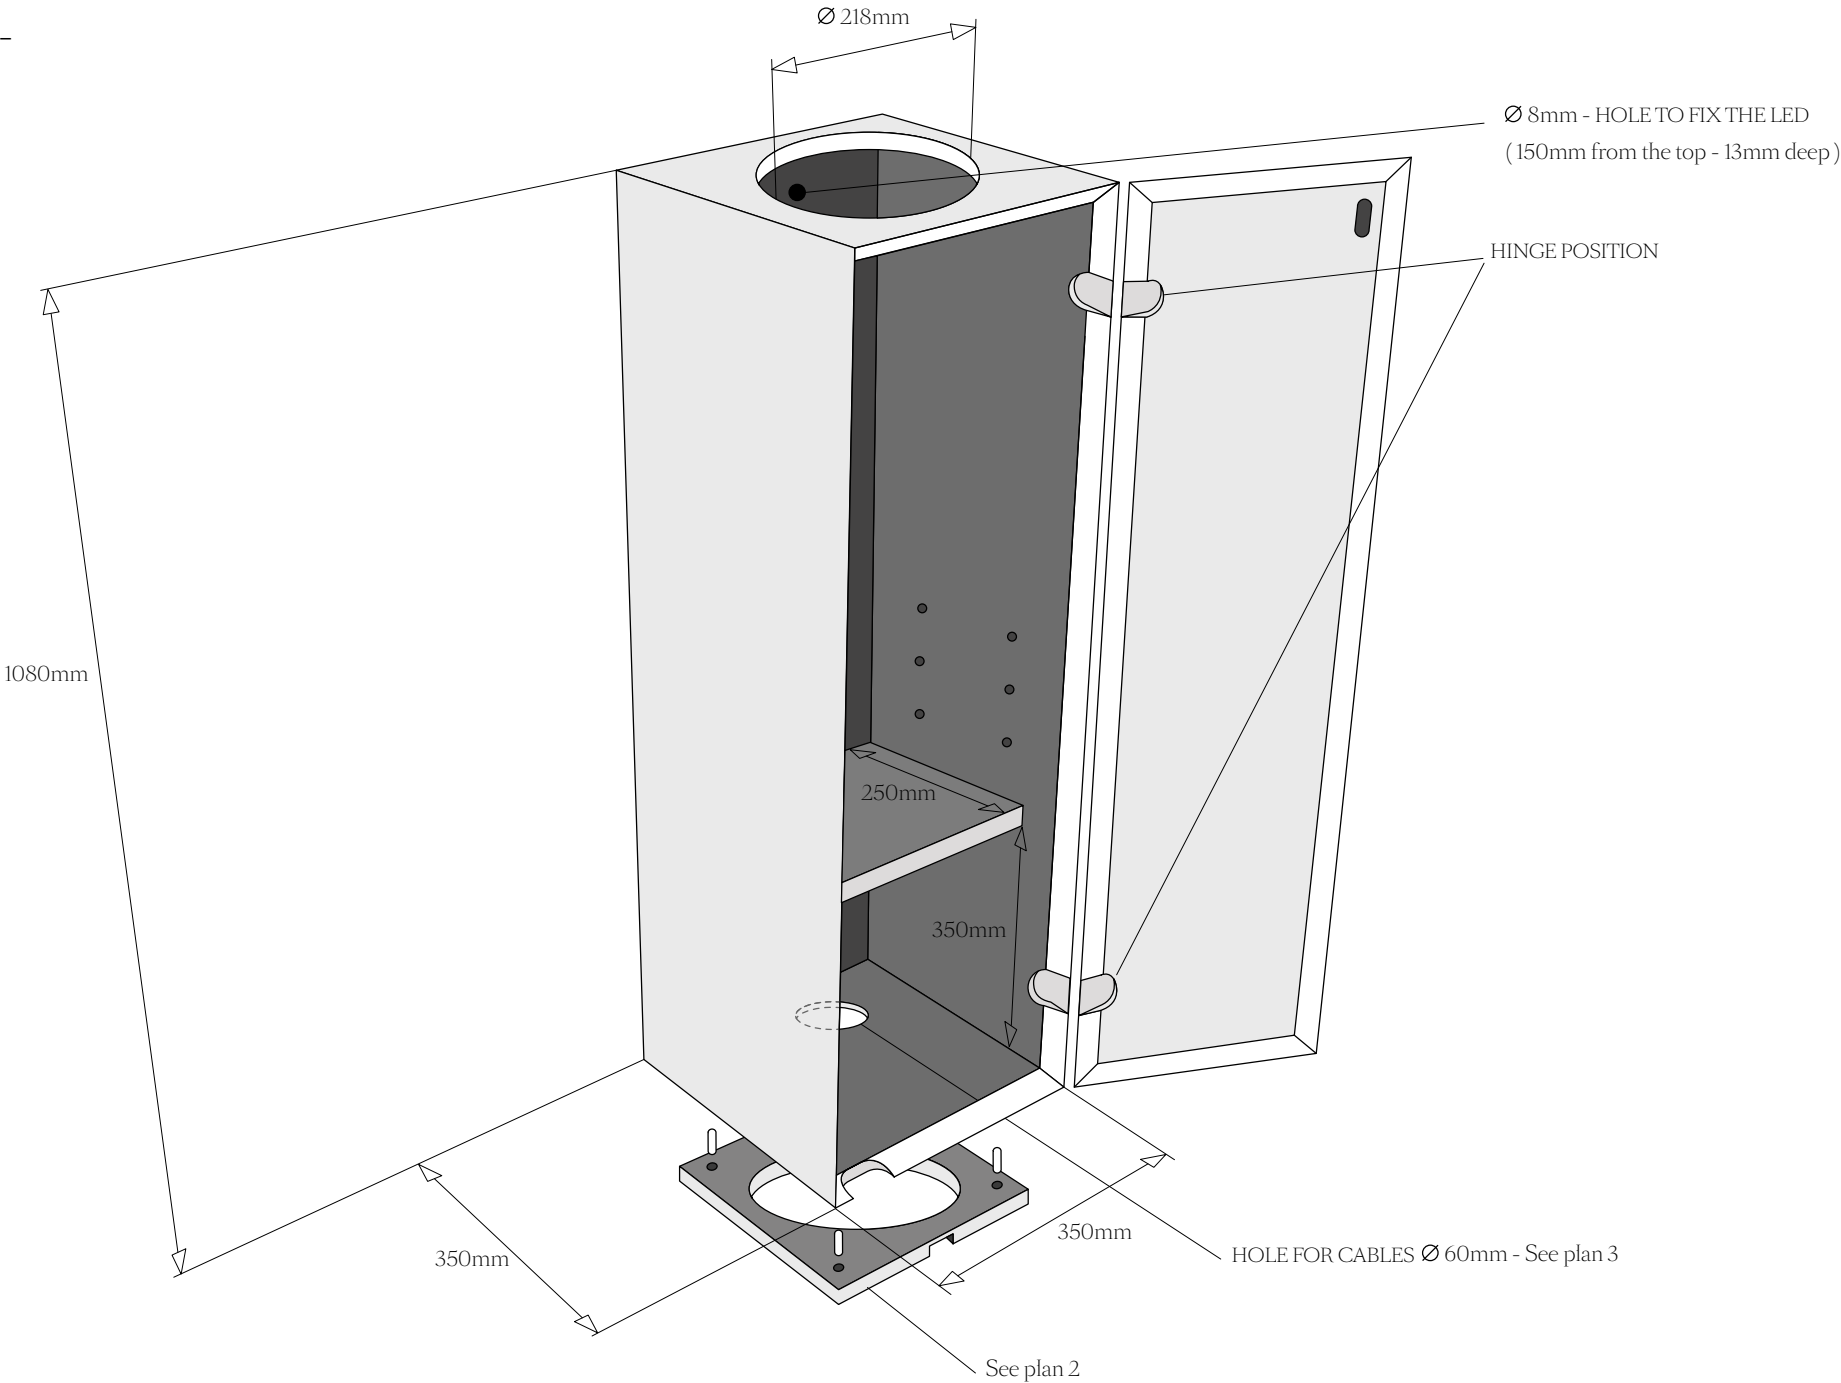


www.darwinsect.com


- Plan 1 -



- Plan 2 -

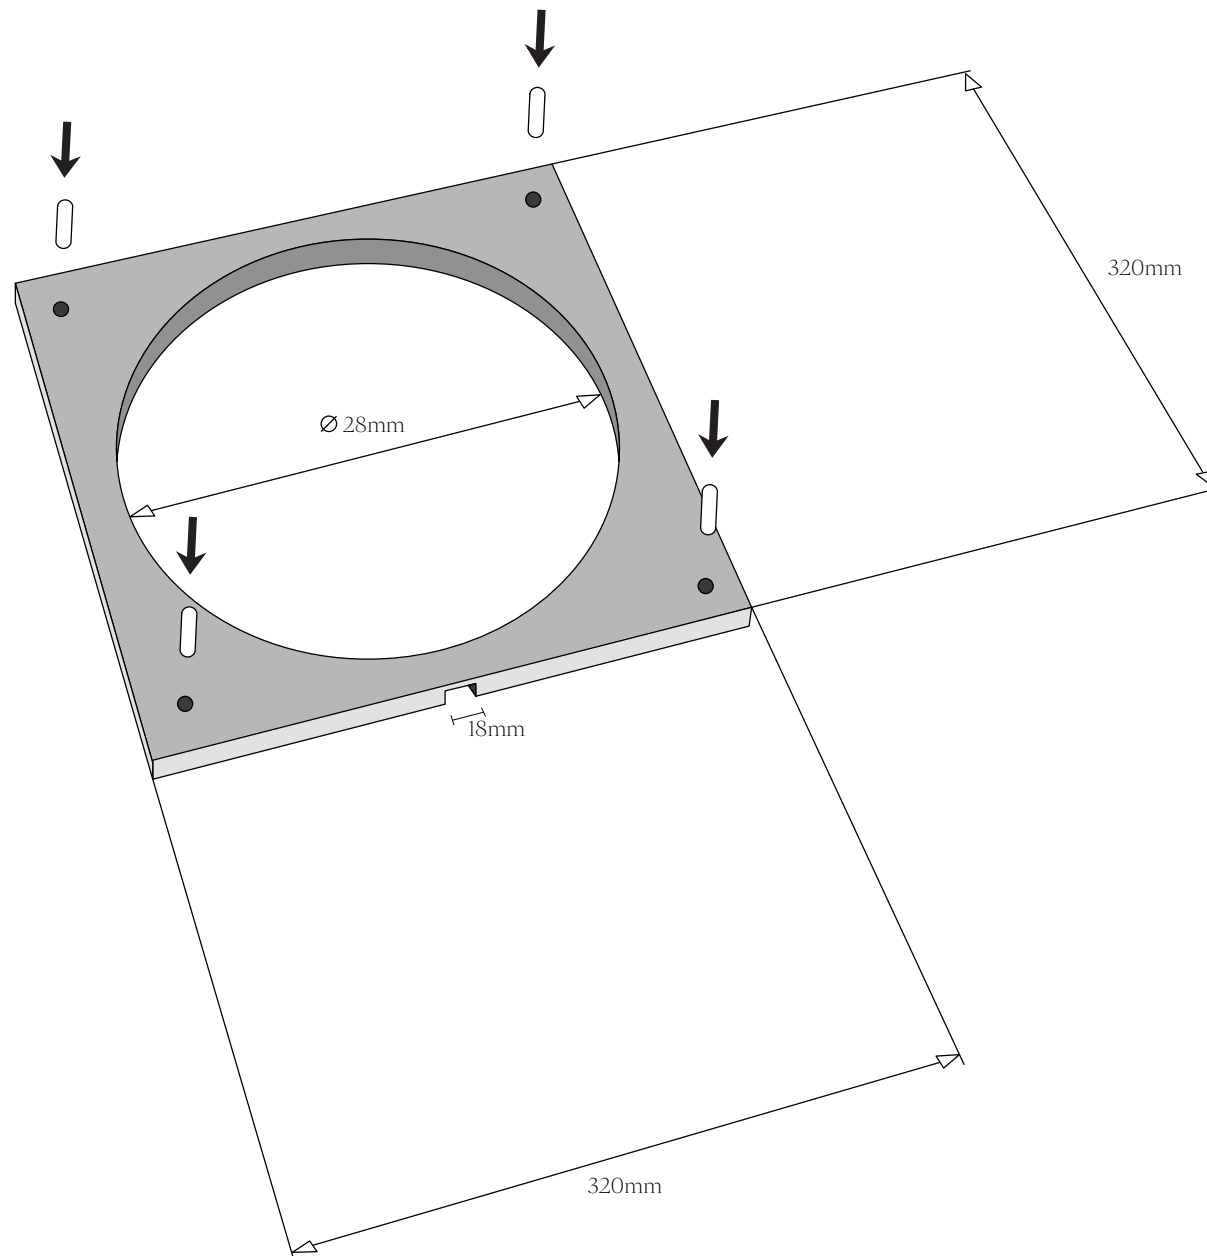

- Plan 3 -



47mm

Ø 60mm

FR : - NOS RECOMMANDATIONS -

- Utiliser des panneaux de MDF de 18mm.
- Arrondir toutes les arrêtes apparentes avec un angle de 3mm.
- Couper 2mm de chaque arrête à 45° de la porte et du chambranle pour qu'elles ne soient plus coupantes et moins fragiles.
- Peindre l'ensemble en cabine avec une laque satinée blanche RAL 9010.
- Le pied du socle est amovible pour vous permettre d'orienter le passe-câble.

LE SOCLE EN BOIS DEJA ASSEMBLE EST EGALEMENT DISPONIBLE SUR NOTRE eSHOP - www.darwinsect.com

ENG : - OUR RECOMMENDATIONS -

- Use MDF-platte of 18mm.
- Round all exposed edges are with a radius of 3mm.
- Cut 2mm of each 45° edge of the door and the jamb to make it less brittle and not sharp-edged anymore.
- Paint the whole of the base in a paint booth. Use a satin white lacquer RAL 9010 .
- The leg of the base is removable to allow you to orientate the cable guide.

PLEASE VISIT OUR eSHOP TO GET THE WOODEN BASE ALREADY ASSEMBLED - www.darwinsect.com

Thanks to
www.design-menuiserie.be

